
APC-958X SPEEDLITE FLASH





Instruction Manual

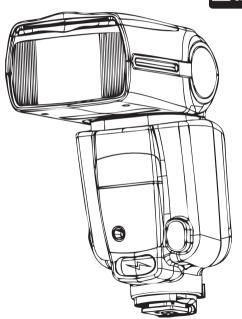

APC-958X SPEEDLITE FLASH

Please read this instruction manual carefully before using this product and keep it for further reference.

Product specifications and updated revised design are subject to change without notice.

Thank You for Purchasing this Product

The Altura Photo Speedlite is an EOS-dedicated, high-output flash unit automatically compatible with E-TTLII, E-TTL, and TTL autoflash. It can serve as an on-camera flash as well as a master unit or a slave unit in a wireless, multiple-Speedlite system.

- Before using the Speedlite, read this instruction manual and your camera's instruction manual to familiarize yourself with the Speedlite operations.
- The basic operation is just as easy as using normal AE shooting. When the product is attached to an EOS camera, almost all automatic exposure control for flash photography is handled by the camera. It is almost the same as using the camera's built in flash if it has one. You can think of the product as a built-in, high-output flash, but attached externally.
- It becomes automatically compatible with the camera's flash metering mode (E-TTL II. E-TTL, and TTL).
 - In accordance with the camera's flash control system, the Speedlite controls the flash automatically in the respective flash metering mode:
 - E-TTL II autoflash (evaluative flash metering with preflash reading/ lens distance information)
 - 2. E-TTL autoflash (evaluative flash metering with preflash reading)
 - 3. TTL autoflash (off-the-film metering for real-time flash metering)

Regarding the camera's available flash metering modes, refer to the "External Speedlite" details in the "Specification" portion of your camera's instruction manual.

The camera instruction manual's chapter on flash photography will refer to cameras having flash metering modes 1 or 2 as a Type-A camera (compatible with E-TTL II or ETTL). Cameras having flash metering mode 3 (compatible with only TTL) are called Type-B cameras.

-1

Contents

1	Getting Started and Basic Operation	7
2	Using Flash	.13
3	Wireless Flash	.27
4	Reference	.42


Conventions Used in this Manual


- The < > > symbol in the text refers to the select dial.
- The < ⑤ > symbol in the text refers to the select/set button.
- The C.Fn symbol in the text refers to a custom function.
- The operation procedures in this instruction manual assume that both the camera and Speedlite's power switches are on.
- Icons used in the text to indicate the respective buttons, dials, and settings match the same icons found on the camera and on Speedlite.
- The (♂4)/(♂6)/(♂16) icons indicate that the respective function remains in effect for 4 sec., 6 sec., or 16 sec. after you let go of the button.
- This instruction manual uses the following alert symbols:

▲ :The caution symbol indicates a warning to prevent shooting problems.


The note symbol gives supplemental information.

Nomenclature

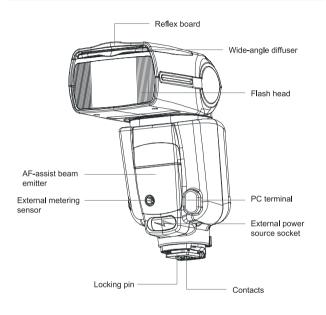

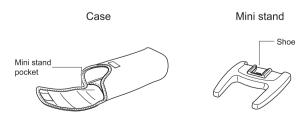


Nomenclature

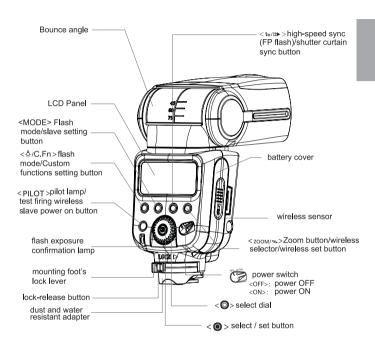

The <♂> illumination lasts for 12 sec.

LCD Panel

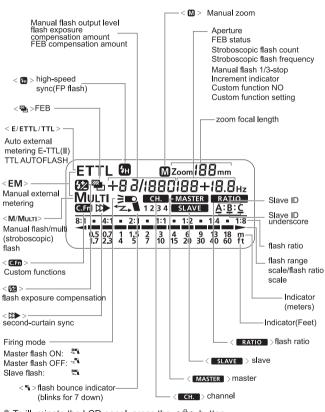

- To illuminate the LCD panel, press the <♠> button.
- The items displayed depend on the current settings.



Getting Started and Basic Operation

Installing the Batteries	8
Attaching to the Camera	9
Turning on the Power Switch	10
Fully Automatic Flash Shooting	11
Using F-TTL II and F-TTL Autoflash in the Shooting Modes	12

A Cautions for firing continuous flashes


- To avoid overheating and degrading the flash head, do not fire more than 20 continuous flashes. After 20 continuous flashes. allow a rest time of at least 10 min.
- If you fire more than 20 continuous flashes and then fire more flashes in short intervals, the inner overheating prevention function may be activated to make the recycling time about 8 to 20 sec. If this occurs, allow a rest time of about 15 min, and the flash will then return to normal

Installing the Batteries

Install four size-AA batteries.



Slide the battery chamber lid open.

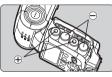

Insert the batteries following the [+] and [-] marks as shown.



Close the battery chamber lid.

Recycling Time and Flash Count (with size-AA alkaline batteries)

Recycling	Flash Count	
Quick Flash	r lasir Count	
Approx. 0.1 - 2.5 sec.	Approx. 0.1 - 5 sec.	Approx. 100 - 500.

- Based on new size-AA alkaline batteries.
- Quick flash enables a flash to be fired before flash-ready.



- ▲ Using size-AA batteries other than the alkaline type may cause improper battery contact due to the irregular shape of the battery contacts.
 - If you change the batteries after firing many flashes continuously, be aware that the batteries might be hot.



 Use a new set of four batteries of the same brand. When replacing the batteries, replace all four at one time.

Size-AA Ni-MH or lithium batteries can also be used.

Attaching to the Camera



- 1 Attach the Speedlite.
 - Slip the Speedlite mounting foot into the camera's hot shoe all the way.



- 2 Secure the Speedlite.
 - On the mounting foot, slide the lock lever to the right.
 - When the lock lever clicks in place, it will be locked.




3 Detach the Speedlite.


9

 While pressing the lock-release button, slide the lock lever to the left and detach the Speedlite.

Turning on the Power Switch

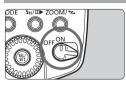

- 1 Set the power switch to < ON >.
 - The flash recycling starts.
 - C.Fn Can set the startup sound of the flash

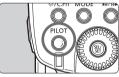

- 2 Check that the flash is ready.
 - The pilot lamp will first turn green (ready for quick flash), then red (flash ready).
 - Pressing the pilot lamp will fire a test flash.

About Quick Flash

Quick flash enables a flash to be fired before flash-ready, when the pilot lamp is still green.

Although the Flash Output will be 1/6 to 1/2 that of the full output, quick flash is effective for near subjects and when you want a shorter recycle time. Set the drive mode to single shooting. Quick flash cannot be used in the continuous shooting, FEB, manual flash, and stroboscopic flash modes.

About Auto Power Off

To save battery power, the power will turn off automatically after a certain period (approx. 1.5 min.) of idle use. To turn on the Speedlite again, press the camera's shutter button halfway or press the Speedlite's test firing button.

10



• The setting of the flash will be saved when power off.

Fully Automatic Flash Shooting

When you set the camera's shooting mode to $< P > (Program AE) < or > \square$ (Full Auto), E-TTL II/E-TTL fully automatic flash will make it as easy as normal AE shooting in the < P > and $< \square >$ modes.



1 Set the Speedlite to < ETTL >.

Press the < MODE > button so that <ETTL> is displayed.



2 Focus the subject.

- Press the shutter button halfway to focus.
- The shutter speed and aperture will be displayed in the viewfinder.
- Check that the < \(\frac{1}{2}\)> icon is lit in the viewfinder.



3 Take the picture.

- Check that the subject is within the effective range displayed on the LCD panel.
- Right before the shot is taken, a preflash is fired, then the main flash is fired.
- If a standard flash exposure was obtained, the flash exposure confirmation lamp will light for about 3 sec.



C.Fn Can set with m/ft

Using E-TTL II and E-TTL Autoflash in the Shooting Modes

Just set the camera's shooting mode to < Av > (aperture-priority AE), < Tv > (shutter-priorityAE), or < M > (manual) and you can use E-TTL II/E-TTL autoflash.

Select this mode when you want to set the shutter speed manually.

The camera will then automatically set the aperture matching the shutter speed to obtain a standard exposure.

If the aperture display blinks, it means that the background exposure will be underexposed or overexposed. Adjust the shutter speed until the aperture display stops blinking.

Select this mode when you want to set the aperture manually.

The camera will then automatically set the shutter speed matching the aperture to obtain a standard exposure.

If the background is dark (night scene), a slow sync speed will be used to to obtain a standard exposure of both the main subject and background.

Standard exposure of the main subject is obtained with the flash, while a standard exposure of the background is obtained with a slow shutter speed.

- Since a slow shutter speed will be used for low-light scenes, using a tripod is recommended.
- If the shutter speed display blinks, it means that the background exposure will be underexposed or overexposed. Adjust the aperture until the shutter speed display stops blinking.

Select this mode if you want to set both the shutter speed and aperture manually.

Standard exposure of the main subject is obtained with the flash. The exposure of the background is obtained with the shutter speed and aperture combination you set.

 If you use the < DEP> or < A-DEP > shooting mode, the result will be the same as using the < P > (Program AE) mode.

Flash Sync Speeds and Apertures Used

	Shutter Speed Setting	Aperture Setting
Р	Set automatically (1/60 sec 1/X sec.)	Automatic
Tv	Set manually (30 sec 1/X sec.)	Automatic
Av	Set automatically (30 sec 1/X sec.)	Manual
М	Set manually (buLb, 30 sec 1/X sec.)	Manual

• 1/X sec. is the camera's maximum flash sync speed.



2


Using Flash

Flash Exposure Compensation14
FEB
FEL: FE Lock16
High-speed Sync17
Bounce Flash18
Zoom: Setting the Flash Coverage and Using the Wide
Panel19
M : Manual Flash20
MULTI: Stroboscopic Flash22
Second-Curtain Sync24
C.Fn: Setting Custom Functions25


Fla

Flash Exposure Compensation


In the same way as normal exposure compensation, you can set exposure compensation for flash. The flash exposure compensation amount can be set up to ± 3 stops in 1/3-stop increments.

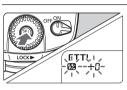

- 1 Select < 52 >.
 - Press the < > button so that< >> is displayed.
 - ► The < > icon and the flash exposure compensation amount will blink.

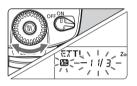

- Set the flash exposure compensation amount.
 - Turn the < > dial to set the amount.
 - To cancel the flash exposure compensation, set the amount to a+0.

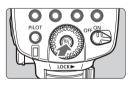

- 3 Press the $< \bigcirc >$ button.
 - Flash exposure compensation will be set.

If flash exposure compensation has been set with both the Speedlite and camera, the Speedlite's flash exposure compensation amount will override the camera's.




You can take three flash shots while automatically changing the flash output for each shot up to ±3 stops in 1/3-stop increments or 1/2-stop increments if the camera only enables 1/2-stop increments. This is called FEB (Flash Exposure Bracketing).






- Press the < > button so that< > > is displayed.
- ▶ The < ₱ > icon and bracketing amount will blink

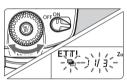

Set the flash exposure bracketing amount.

Turn the < > dial to set the amount.

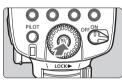

Press the $\langle \bigcirc \rangle$ button.

FEB will be set.




- After the three shots are taken, FEB will be cancelled automatically.
- For FEB, set the camera's drive mode to single shooting. Be sure the flash is ready before shooting.
- You can also combine FEB with flash exposure compensation and FF lock

FFI: FF Lock

FE (flash exposure) lock locks the correct flash exposure setting for any part of the scene.

With <ETTL> displayed on the LCD panel, you press the camera's <FEL> button. If the camera does not have the < FEL > button, press the < * > button.

1 Focus the subject.

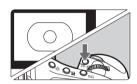

- 2 Press the < FEL > button (た16).
 - Aim the subject at the center of the viewfinder and press the < FEL > button.
 - The Speedlite will fire a preflash. and the required flash output for the subject is retained in memory.
 - "FEL" will be displayed in the viewfinder for 0.5 sec.
 - Each time you press the < FEL > button, a preflash will be fired and a new flash exposure setting will be locked.



- If the subject is too far away and underexposure will result, the < \$> icon will blink in the viewfinder. Move closer to the subject and try the FE lock again.
 - If< ETTL > is not displayed on the LCD panel. FE lock cannot be set.
 - If the subject is too small, FE lock might not be very effective.

High-Speed Sync

With high-speed sync (FP flash), the flash can synchronize with all shutter speeds. This is convenient when you want to use aperture priority for fill-flash portraits.



Select < 📶 >.

Press the <≒/

/>

/>

>

button so that < ->

-> is displayed.



- If you set the shutter speed that is the same or slower than the camera's maximum flash sync speed. < \$H> will not be displayed in the viewfinder.
- With high-speed sync, the faster the shutter speed, the shorter the effective flash range will become. Check the LCD panel for the effective flash range.
- To return to normal flash, press the < ⅓H/III>> button again. The < III> will disappear.
- Stroboscopic flash cannot be set.

Bounce Flash


By pointing the flash head toward a wall or ceiling, the flash will bounce off the surface before illuminating the subject. This can soften shadows behind the subject for a more natural-looking shot. This is called bounce flash.

Set the Bounce Direction

Turn the flash head

If the flash coverage is set automatically, the flash coverage will be fixed to 50mm. The LCD panel will also display < --> mm.

You can also set the flash coverage manually.

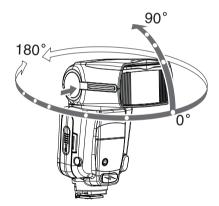




- ▲ If the wall or ceiling is too far away, the bounced flash might be too weak and result in underexposure.
 - The wall or ceiling should be a plain, white color for high reflectance. If the bounce surface is not white, a color cast may result in the picture.
 - After you take the shot, if the flash exposure confirmation lamp does not light, use a larger aperture opening and try again.

17

Creating a Catchlight


With the catchlight panel, you can create a catchlight in the subject's eyes to add life to the facial expression.

Point the flash head upward by

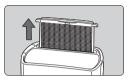

2 Pull out the wide panel.

The catchlight panel will come out at the same time

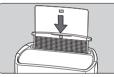

3 Push the wide panel back in.

- Push in only the wide panel.
- Follow the same procedure as for bounce flash



- Point the flash head straight ahead and then upward by 90°. "The catchlight will not work if you swing the flash head left of right.
- For maximum catchlight effect, stay within 1.5 m/4.9 ft of the subject.

Close-Up Flash Shooting

When shooting a subject within about 0.5 - 2 m (1.6 - 6.6 ft) away, hold down the tilt the flash head downward by 7° to illuminate the lower part of the image.

ZOOM: Setting the Flash Coverage and Using the Wide Panel

The flash coverage can be set to match the lens focal length from 24mm to 105mm. The flash coverage can be set automatically or manually. Also, with the built-in wide panel, the flash coverage can be expanded for 14mm wide-angle lenses




Press the < 700M /⁴Z▶ > button

- Turn the <
 dial to change the flash coverage.
- If < M > is not displayed, the flash coverage will be set automatically.



- If you set the flash coverage manually, make sure it covers the lens focal length so that the picture will not have a dark periphery.
- If you use a commercially-available sync cord to connect the camera to the Speedlite's PC terminal, set the flash zoom manually.

Using the Wide Panel

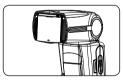

Pull out the wide panel and place it over the flash head as shown. The flash coverage will then be extended for 14mm.

- The catch light panel will come out at the same time. Push the catchlight panel back in.
- The < ZOOM / ⁴Z→> button will not work



The flash coverage will not be compatible with the EF15mm f/2.8 Fisheye lens.

- If you use bounce flash with the wide panel in place, the entire display on the LCD panel will blink as a warning. Since the subject will be illuminated by both the bounce flash and direct flash, it will look unnatural.
- Pull out the wide panel gently. Using excessive force may detach the wide panel.


M: Manual Flash

You can set the flash output from 1/128 power to 1/1 full power in 1/3-stop increments.

Use a hand-held flash meter to determine the required flash output to obtain a correct flash exposure.



1 Press the < MODE > button so that < M > is displayed.

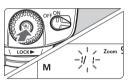

2 Set the flash output.

- Press the < >> button.
- ▶ The flash output blinks.
- Turn the < > dial to set the flash output, then press the < > button.
- Press the shutter button halfway to see the effective flash range displayed.



Flash Output Display

When you change the flash output during shooting, the table below makes it easier to see how the stop changes such as 1/2–0.3—1/2–1/2 +0.3. You can see how the stop changes when you increase or decrease the flash output.

For example, when you decrease the flash output to 1/2,1/2-0.3, or 1/2-0.7, and then increase the flash output to more than 1/2,1/2+0.3,1/2+0.7, and 1/1 will be displayed.

(Example) Figures for decreased flash output →

1/1	1/1-0.3	1/1-0.7	1/2	1/2-0.3	1/2-0.7	1 /4	٠.
	1/2+0.7	1/2+0.3		1/4+0.7	1/4+0.3	1/4	••

← Figures for increased flash output

Metered Manual Flash Exposures

- 1 Set the camera and Speedlite.
 - Set the camera's shooting mode to < M > or < Av >.
 - Set the Speedlite to manual flash.
- Focus the subject.
 - Focus manually.
- 3 Set up an 18% gray card.
 - Place the gray card at the subject's position.
 - In the viewfinder, the entire spot metering circle at the center should cover the gray card.
- 4 Press the < FEL > button (₺ 16).
 - ▶ The Speedlite will fire a preflash and the required flash output for the subject is retained in memory.
 - On the right side of the viewfinder, the exposure level indicator will show the flash exposure level for the correct flash exposure.
- 5 Set the flash exposure level.
 - Adjust the Speedlite's manual flash level and the camera aperture so that the flash exposure level aligns with the standard exposure index.



- 6 Take the picture.
 - Remove the gray card and take the picture.

MULTI: Stroboscopic Flash

With stroboscopic flash, a rapid series of flashes are fired. It can be used to capture multiple images of a moving subject in a single photograph. You can set the firing frequency (number of flashes per sec expressed as Hz), the number of flashes, and the flash output.




Press the < MODE > button so that < Multi > is displayed.



Select the item to be set.

Press the < >button to select the item (blinks).

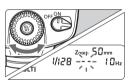

Set the desired number.

- Turn the < >> dial to set the number, then press the < > button.
- The next item to be set will blink.
- After you set the flash output and press the < > button, all the settings will be displayed.

Calculating the Shutter Speed

During stroboscopic flash, the shutter remains open until the firing stops. Use the formula below to calculate the shutter speed and set it with the camera.

Number of flashes - Firing frequency = Shutter speed

For example, if the number of flashes is 10 and the firing frequency is 5 Hz, the shutter speed should be at least 2 sec.

⚠ To avoid overheating and deteriorating the flash head, do not use stroboscopic flash more than 10 times in succession. After 10 times, allow the Speedlite to rest for at least 15 min. If you try to use the stroboscopic flash more than 10 times in succession, the firing might stop automatically to protect the flash head. If this happens, allow the Speedlite to rest for at least 15 min.



- Stroboscopic flash is most effective with a highly reflective subject against a dark background.
- Using a tripod, a remote switch, and external power source is recommended.
- A flash output of 1/1 or 1/2 cannot be set for stroboscopic flash.
- Stroboscopic flash can be used with "bulb."
- If the number of flashes is displayed as the firing will continue until the shutter closes or the battery is exhausted. The number of flashes will be limited as shown by the table below.

Maximum Stroboscopic Flashes

Hz Flash Output	1	2	3	4	5	6-7	8-9
1/4	7	6	5	4	4	3	3
1/8	14	14	12	10	8	6	5
1/16	30	30	30	20	20	20	10
1/32	60	60	60	50	50	40	30
1/64	90	90	90	80	80	70	60
1/128	100	100	100	100	100	90	80

Hz Flash Output	10	11	12 - 14	15 - 19	20 - 50	60 - 199
1/4	2	2	2	2	2	2
1/8	4	4	4	4	4	4
1/16	8	8	8	8	8	8
1/32	20	20	20	18	16	12
1/64	50	40	40	35	30	20
1/128	70	70	60	50	40	40

• If the number of flashes is displayed as - - the maximum number of flashes will be as shown by the table below regardless of the firing frequency.

Flash Output	1/4	1/8	1/16	1/32	1/64	1/128
Flash Count	2	4	8	12	20	40



Second-Curtain Sync

With a slow shutter speed, you can create a light trail following the subject. The flash fires right before the shutter closes.



Press the < ⋙ > button so that < ⋙ > is displayed.



- Second-curtain sync works well in the camera's "bulb off" mode.
- To return to normal flash, press the < ▷ > button again. The < ▷ > icon will disappear.
- With E-TTL II/E-TTL, two flashes will be fired even at slow shutter speeds. The first flash is only the preflash, and not a malfunction.
- Stroboscopic flash cannot be set.
- Wireless flash cannot be set.

C.Fn: Setting Custom Functions

You can customize Speedlite features to suit your shooting preferences. You do this with Custom Functions.

Custom Function No.	Function	Setting NO.	Setting & Description
C.Fn-00	Distance indicator display	0	Meters(m)
C.I II 00	Distance indicator display	1	feet(ft)
C.Fn-01	Auto power off	0	ON
CITIOI	Adio power on		OFF
C.Fn-03	.Fn-03 FEB cancelled automatically		ON
C.111 03	1 EB defice determentally	1	OFF
C.Fn-04	Sequence of FEB	0	0 → - → +
C.FII-04	Sequence of FEB	1	- → 0 → +
CF- 07	Automotic tection fleeb	0	1/32
C.Fn-07	Automatic testing flash	1	1/1
C.Fn-14	Turn on/off warning tone	0	OFF
C.i II-14	ram sign training tone	1	ON



- 1 Hold down the < ∜/C.Fn > button until < C.Fn > is displayed.
- 2 Select the Custom Function No.
 - Turn the < > dial to set the Custom Function No.
- 3 Change the setting.

26

- Press the < > button.
- ▶ The Custom Function No. blinks.
- ► Turn the < > dial to set the desired number, then press the < > button.
- After you set the Custom Function and press the < MODE > button, the camera will be ready to shoot.





3

Wireless Flash

About Wireless Flash	. 28
Wireless Settings	. 30
Fully Automatic Wireless Flash	. 31
Flash Ratio with E-TTLII	. 35
Setting the Flash Output for Each Slave	. 39
Sotting Manual Flack and Stroboscopic Flack with the Slave	11


27

About Wireless Flash

With multiple Speedlites having the wireless flash feature, you can create various lighting effects with the same ease as using normal E-TTL II autoflash. The settings you input with the master unit attached to the camera are also automatically transmitted to the slave units which are controlled by the master unit via wireless. Therefore, you do not need to operate the slave unit(s) at all during the shoot. The basic wireless set-up is illustrated below. All you need to do is set the master unit to < E-TTL > enable wireless E-TTL II autoflash.

Note that with Type-A cameras prior to the EOS-1 D Mark II and EOS ELAN 7NE/ELAN 7N/30V/33V, E-TTL autoflash will be used instead.

Positioning and Operation Range

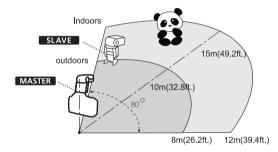



- Any flash exposure compensation, FE lock, FEB, manual flash, and strobo-scopic flash settings set with the master unit will all be automatically transmitted to the slave units.
- Even with multiple slave units, all of them will be controlled in the same way via wireless.
- A product set as a slave unit can also be controlled wirelessly by Speedlite Transmitter ST-E3 (optional).


28

 Hereinafter, the "master unit" will refer to a product attached to the camera, and a "slave unit* will be a wireless product.


Multi-Speedlite / Wireless Lighting Configurations

You can create two or three slave groups and set the flash ratio for E-TTL II autoflash shooting.

wireless flash with two slave groups

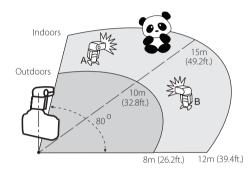

wireless flash with three slave groups

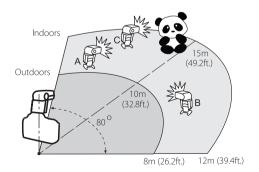

Wireless Settings

You can switch between normal flash and wireless flash for normal shooting, be sure to set the wireless setting to OFF.

Master Unit setting






- 1 Press the < ZOOM > button
 - 2 sec.or longer until the display blinks as shown on the left.
- 2 Set it as the master unit.
 - Turn the < > > dial until< MASTER > blinks, then press the < > > button.
 - < MASTER > and < CH. > will be displayed, and the Speedlite is set as the master unit.



Slave Unit setting

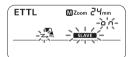

- 1 Set it as a slave unit.
 - Do the "Master Unit setting" procedure above for step 2, turn the
 > dial until
 SLAVE
 blinks then press the
 > button.
 - < SLAVE > and < CH. > will be displayed, and the Speedlite will set as a slave unit.



Fully Automatic Wireless Flash

This method has all the Speedlites fire at the same flash output with E-TTL II autoflash controlling the total flash output.



1 Set the camera-attached product as the master unit.




2 Set the other product Speedlite(s) as the wireless slave unit(s).




Check the communication channel.


- If the master unit and slave unit(s) are set to a different channel, set them all to the same channel.
- 4 Position the camera and Speedlites.
 - Position the Speedlites within the range shown on the next page.
- 5 Set the master unit's flash mode to <ETTL>.
 - For shooting, < ETTL > will also be set automatically for the slave unit(s).

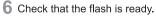


31

 When the slave unit(s) is ready to fire, the AF-assist beam will blink at 1-sec. intervals.

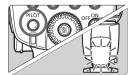

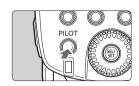

- 7 Check the flash operation.
 - Press the master unit's test firing button.
 - The slave unit will fire. If the flash does not fire, adjust the slave unit's angle toward the master unit and distance it from the master unit.
- Set the camera and shoot.
 - Set the camera in the same way as with normal flash shooting.

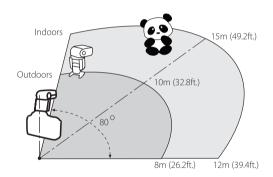

- Use the mini stand (tripod socket provided) to prop up the slave unit.
- Use the bounce feature to swing the slave unit so that its wireless sensor faces the master unit.
- Indoors, the wireless signal can also bounce off the wall so there is more leeway in positioning the slave unit(s).
- After positioning the slave unit(s), be sure to test the wireless flash operation before shooting.

32

 Do not place any obstacles between the master unit and slave unit(s). Obstacles can block the transmission of wireless signals.



- The Speedlite's zoom setting will be set automatically to 24mm. It is possible to change the master unit's zoom setting. However, note that the master unit transmits wireless signals to the slave unit(s) with the preflash. Therefore, the flash coverage must cover the slave unit's position. If you change the master unit's zoom setting, be sure to test wireless flash operation before shooting.
- If the slave unit's auto power off takes effect, press the master unit's test firing button to turn on the slave unit.
- A test flash cannot be fired while the camera's operation timer §4 or §6 is active.

Master Unit's Flash ON/OFF

You can disable the master unit firing so that only the slave unit(s) will fire a flash.



Press the <ZOOM/*Z>> button so that the display blinks as shown on the left.



Disable the master unit's flash firing.

- Turn the < > > dial to select < ## FF >, then press the < > > button.
- ► The icon will change to < -- >.



Even if you disable the master unit's flash firing, it will still fire a preflash to transmit wireless signals.

Using Fully Automatic Wireless Flash

Flash exposure compensation and other settings set with the master unit will also be automatically set in the slave units. Therefore, there is no need to operate the slave unit(s).

Wireless flash with the following settings can be done in the same way as normal flash shooting.

- Flash exposure compensation
- High-speed sync(FP flash)
- FE lock


- FEB
- Manual flash
- · Strobos copic flash




With FE lock, if even one Speedlite will result in underexposure. The < \$\forall \circ\rightarrow\$ icon will blink in the viewfinder. Open the aperture more or move the slave unit closer to the subject.

Setting the Communication Channel

If there is another wireless flash system nearby, you can change the channel No. to prevent signal confusion. Both the master and slave units must be set to the same channel No.

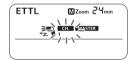

1 Press the <ZOOM/⁴Z→> button so that < CH. > blinks.

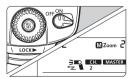


- 2 Set the channel No.
 - Turn the <>> dial to select the channel number then press the
 > button.

Flash Ratio with E-TTL II

With one master unit and one slave unit or two slave groups, you can set the flash ratio for E-TTL II autoflash shooting.

The example below has two slave units and the master unit disabled from firing.

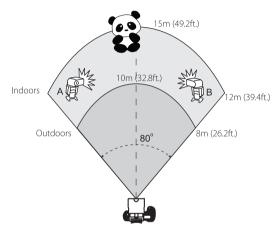


Setting the Slave Units

Two slave units can be assigned to different slave groups by setting the slave ID.

1 Set the wireless mode to



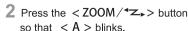



3 Set the Slave ID

- Press the < > button
- ► Slave ID < A > will be set.
- For the other slave unit, do steps 1 and 2, turn the < ∅ > dial to select
 ⟨B⟩, then press the < ∅ > button.
- Slave ID < B > will be set.


Setting the Master Unit and Shooting

- 1 Set the wireless mode to < MASTER >.
- 2 Disable the master unit's flash firing.








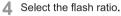

Turn the < > dial to select < A:B >, then press the < > button.



- Set the flash ratio.
 - Turn the < >dial to set the flash ratio.
- Set the camera and shoot
 - Set the camera in the same way as with normal flash shooting.

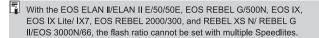


36



- The flash ratio range of 8:1 -1:1 -1:8 is equivalent to 3:1 -1:1-1:3 in stops (1/2-stop increments).
- The flash ratio under the mark is shown in parentheses below the scale.

8:1 •	4:1 •	2:1 •	1:1 •	1:2 •	1:4 • 1:8
(5.6:1) (2.8:	1) (1.4:	1) (1:1.	4) (1:2.8) (1:5.6)

Wireless Flash with Three Slave Groups

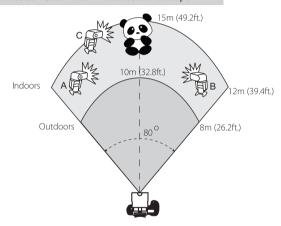

You can have slave groups A and B, but you will have to add slave group C if you choose to do so. You can use slave groups A and B to obtain the standard flash exposure of the subject, and slave group C to illuminate the background to eliminate shadows.

Set the slave units.

- See "Setting the Slave Units" on page 41 to set the slave unifs ID to < A >,
 B >, or < C >.
- For slave < C >, also set the flash exposure compensation as necessary.

2

Set the master unit and shoot.

 Follow "Setting the Master Unit and Shooting*, select < A:B C >.



- If < RATIO A:B > is set, the slave unit in slave group < C > will not fire.
- If you point the slave unit in slave group <C> toward the subject, the subject will be overexposed.

Modeling Flash

If the camera has a depth-of-field preview button, pressing it will fire the flash continuously for 1 sec. This is called the modeling flash. It enables you to see the shadow effects on the subject and the lighting balance. You can fire the modeling flash for both wireless and normal flash shooting.




Do not fire the modeling flash more than 10 consecutive times. If you fire the modeling flash 10 consecutive times, allow the Speedlite to rest for at least 10 min. to avoid overheating and deteriorating the flash head.



The modeling flash cannot be fired with the EOS REBEL 2000/300 and Type-B cameras (p.2).

About Slave Group Control

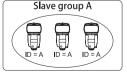

For example, if you have the slave ID set to < A > for three slave units, all three slave units will be controlled as if they were one Speedlite in slave group A.

Setting the Flash Output for Each Slave

With manual flash and multiple Speedlites, you can set a different flash output for each slave unit. All settings are done with the master unit.



1 Press the < MODE > button so that <M> is displayed.




2 Press the <ZOOM/⁴Z→> button so that < RATIO > blinks.



3 Select the flash ratio.

Turn the < > dial to select < A:B > or < A:B:C >, then press the < > button.

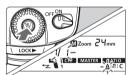

- Set the flash output.
 - Press the < > >button.
 - The slave ID $< \underline{\mathbf{A}} >$ will blink.
 - Turn the < ∅ > dial to set the flash output for < A >, then press the < ∅ > button.
 - The slave ID $< \underline{B} >$ will blink. Turn the $< \bigcirc >$ dial to set the flash output for $< \underline{B} >$, then press the $< \bigcirc >$ button.
 - The slave ID < C > will blink.Turn the
 < > dial to set the flash output for
 < C >, then press the < > button.
 - All of the slave IDs will light up.

Setting Manual Flash and Stroboscopic Flash with the Slave

Manual flash or stroboscopic flash can be set manually with the slave unit. As with studio flash units, you can set the flash output individually with the slave units for wireless or manual flash.

Manual Flash



- Hold down the < MODE > button for 2 sec. or more.
- < M> will blink.
- Set the manual flash output (p.22).

Stroboscopic Flash



- Hold down the < MODE > button for 2 sec. or more.
- < M> will blink.
- Press the < MODE > button again and < Multi > will blink.
- Set the stroboscopic flash.

SI/S2 function

When the flash is in SI mode, it will work with the first work of the master flash synchronously, with the result consistent with the use of radio slave. To use this mode correctly, the master flash should be set at manual flash and the TTL flash system with the preflash function and the red-reduction function with multiple flashes should not be used.

S2 mode: It is also called: "preflash cancel mode." This mode is similar with SI mode, but it can neglect the preflash given by TTL flash. Therefore, it can support the main flash working in TTL mode, if SI mode cannot flash correctly and synchronically with your internal flash, you can try to use S2 mode.

SI/S2 function: SI/S2 Function can be Selected in the M Mode.



Press the < MODE > button so that <M> is displayed.



Turn the < ② > dial clockwise to switch to SI function.



Turn the < ○ > dial clockwise again to switch to S2 function.



Turn the dial counter clockwise to exit the setting



"On the SI/S2 function, press the <SET> button to set the power level.

41



4

Reference

Troubleshooting Guide	43
Specifications	45
Using a Type-B Camera	48

Troubleshooting Guide

If there is a problem, refer to this Troubleshooting Guide.

The Speedlite does not fire.

- The batteries are installed in the wrong orientation.
- Install the batteries in the correct orientation.
- The Speedlite's internal batteries are exhausted.
- If the flash recycling time takes 30 sec. or longer, replace the batteries.
- Install the Speedlite's internal batteries even when you use an external power source.
- The Speedlite is not attached securely to the camera.
- ▶ Attach the Speedlite's mounting foot securely to the camera.
- The electrical contacts of the Speedlite and camera are dirty.
- Clean the contacts.

The slave unit does not fire.

- The slave's wireless mode is not set to < SLAVE >.
- ► Set it to < SLAVE >.
- The slave unit(s) is not positioned properly.
- ▶ Place the slave unit(s) within the master unit's transmission range.
- ▶ Point the slave unit(s)'s sensor toward the master unit.

The power turns off by itself.

- After 90 sec. of idle operation, auto power off took effect.
- ▶ Press the shutter button halfway or press the test firing button.

The entire LCD panel blinks.

- The wide panel has been pulled out for bounce flash.
- Retract the wide panel.

Auto zoom does not work.

- The Speedlite is not attached securely to the camera.
- ▶ Attach the Speedlite's mounting foot securely to the camera.

The periphery or bottom of the picture looks dark.

- When you had set the flash coverage manually, the setting was at a higher number than the lens focal length, which resulted in a dark periphery.
- Set the flash coverage that is a lower number than the lens focal length or set it to auto zoom.
- If only the bottom of the picture looks dark, you were too close to the subject.
- If the subject is closer than 2 m/6.6 ft, tilt the flash head focal length or downward by 7° (bounce flash).

The flash exposure is underexposed or overexposed.

- There was a highly reflective object (glass, window, etc.) in the picture.
- Use FE lock.
- The subject looks very dark or very bright.
- Set flash exposure compensation. For a dark subject, set a decreased flash exposure. For a bright subject, set an increased flash exposure.

The picture is really blurred.

- The shooting mode was set to < Av>, and the scene was dark.
- Use a tripod or set the shooting mode to < P >.

Specifications

Type

Type: On-camera,E-TTL II/E-TTL/TTL autoflash Speedlite

Compatible cameras: Type-A EOS cameras (E-TTL II/E-TTL autoflash)

Type-B EOS cameras CTTL autoflash)

Flash coverage: 24 -105mm (14mm with wide panel)

Auto zoom (Flash coverage set automatically to match the lens focal length and image size)

Manual zoom

Swinging/tilting flash head (bounce flash)

Flash duration: Normal flash: 1.2 ms or shorter, Quick flash: 2.3 ms or shorter

Color temperature

information transmission: Flash color temperature information transmitted to

camera when flash is fired

Exposure Control

Exposure control system: E-TTL II/E-TTL/TTL autoflash, auto/manual external

metering, manual flash

Effective flash range: Normal flash: Approx. 0.5 - 30 m /1.6 - 98.4 ft.

(With EF50mm f/1.4 lens Quick flash: 0.5 - 7.5 m/1.6- 24.6 ft. (min), 0.5-21 m/

1.6-at ISO 100) 68.9 ft. (max) Flash exposure

compensation: Manual, FEB: ±3 stops in 1/3-stop increments (Manual

and FEB can be combined)

FE lock: With the < FEL > button or the < ★ > button

Stroboscopic flash: Provided (1 -199 Hz)

Flash exposure

confirmation: Pilot lamp lights

Flash Recycling (with size-AA alkaline batteries)
 Recycling time/

Flash-ready indicator: Normal flash: Approx .0.1-5 sec. / Red pilot lamp lights

Quick flash: Approx. 0.1 - 2.5 sec./Green pilot lamp

lights

Wireless Flash

Transmission method: Optical pulse

Channels: 4

Wireless options:OFF, Master, and Slave

Transmission range (Approx.):Indoors: 12-15 m/39.4-49.2ft.,
Outdoors: 8-10 m/26.2 - 32.8 ft.

Master unit reception angle: ±40° horizontal, ±30° vertical

Controllable slave groups: 3(A. B.and C)

Flash ratio control: 1:8-1:1 - 8:1 in 1/2-stop increments

Slave-ready indicator: AF-assist beam blinks

Modeling flash: Fired with camera's depth-of-field preview button

AF-Assist Beam

Linkable AF points: 1-45 AF points (28mm or longer focal length)

Effective range (Approx.): At center: 0.6 -10 m / 2.0 - 32.8 ft.,

Peripheiy: 0.6 - 5 m / 2.0 -16.4 ft.

Power Source

Internal power: Four size-AA alkaline batteries

Size-AA Ni-MH and lithium batteries also usable

Battery life

(Approx, flash count): 100 - 700 flashes (with size-AA alkaline batteries)
Wireless transmissions: Approx. 1500 transmissions (With master unit firing

disabled and size-AA alkaline batteries)

Power saving: Power off after certain period of idleoperation (Approx.

1.5 min. to 15 min.) (60 min, if set as slave)

External power: Compact Battery Pack CP-E4

Dimensions

(LxWxH): 191 x 77 x 60 mm

(excluding dust- and water-resistant adapter)

Weight (Approx.): 398 g / (Speedlite only, excluding batteries)

 Product specifications and external appearance are subject to change without notice.

Using a Type-B Camera

If you use the product with a Type-B camera (TTL autoflash camera), note the available features and restrictions below.

When a Type-B camera is used with the Product set to autoflash, < TTL > will be displayed on the Speedlite's LCD panel. (With a Type-A camera, < ETTL > will be displayed.)

Features Available with Type-B Cameras

- TTL autoflash
- · Flash exposure compensation
- FEB
- Manual Flash
- · Stroboscopic flash
- · Second-curtain sync
- · Manual external metering
- · Wireless slave flash with manual flash
- · Wireless slave flash with stroboscopic flash

Features not Available with Type-B Cameras

- E-TTL II/E-TTL autoflash
- FE lock
- · Autoflash with wireless flash
- · Flash ratio set with wireless slave units